


PD662 User Guide

Quick Reference

Radio Guide for

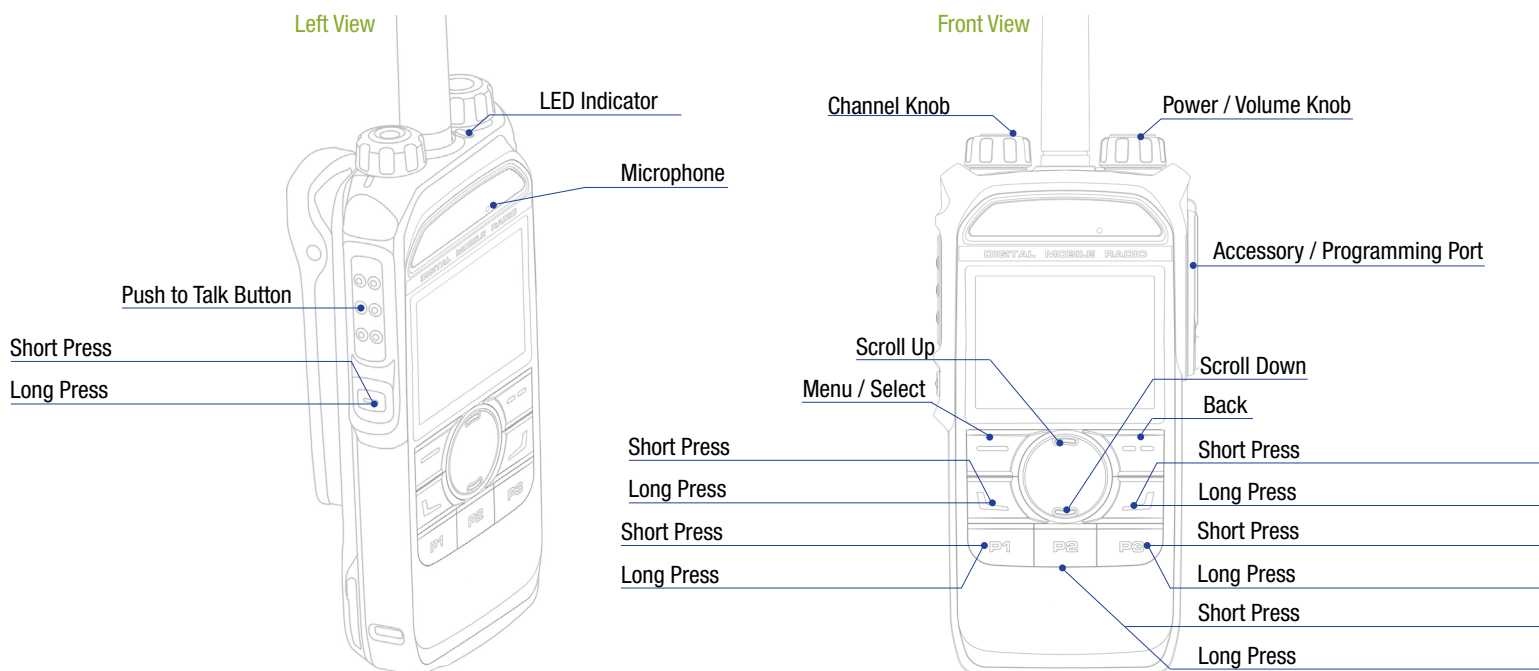

Radio Operation	
<p>Charging the Radio</p> <ul style="list-style-type: none"> • Please ensure the radio is off when charging • Charging while the radio is on shortens the lifespan of your battery • Full charge may take up to 3 hours • The radio should be placed in the charger with the screen (front of radio) facing the front of the charger. 	<p>Turning the Radio On</p> <ul style="list-style-type: none"> • Rotate the on / off volume knob to power on & set the volume • If the radio is tuned to a non-programmed channel it will emit a continuous error tone • Please reference the zone / channel list to select the appropriate channel
<p>Viewing Text Messages</p> <ul style="list-style-type: none"> • When the radio receives a text message it will beep, vibrate & display a mail icon • Pressing the select button will allow you to view the message • If multiple messages have been received, pressing the select button will display a list of messages • You can highlight the messages using the scroll button • Pressing the select button again will allow you to view the highlighted message 	<p>Sending Text Messages</p> <ul style="list-style-type: none"> • To send a text, press the select button to display the menu • Use the scroll button to scroll down to the quick text option & press the select button • This will display the pre-programmed text messages • Use the scroll button to scroll until the desired message is highlighted then press the select button • Once completed, press the select button to confirm & select the send option, then select contact list • Use the scroll button to scroll to the desired contact & press the select button to send
<p>Transmitting Voice Calls</p> <ul style="list-style-type: none"> • To initiate a transmission hold the Push to Talk (PTT) Button • Once you press the PTT Button, the radio will emit a talk permit chirp • This talk permit chirp signals that you can begin to speak • When done speaking release the PTT Button • For a set period of time the system resources are held to allow immediate responses • If there is no response within this period the system will be released signaled by a call ended chirp 	<p>Transmitting Voice Calls Out of Talkgroup</p> <ul style="list-style-type: none"> • To call outside your talkgroup press the contact list button to bring the list on the screen • Use the scroll button to highlight the desired contact • Press the PTT Button & you will transmit on the selected contact's talkgroup • The radio will stay on the selected group until a set time of inactivity or canceled via the home button
<p>Receiving Voice Calls</p> <ul style="list-style-type: none"> • Portables automatically receive transmissions on the Talkgroup • When receiving the screen will display the Talkgroup & the Radio ID / Alias of the transmitting unit 	<p>Channel Controls</p> <ul style="list-style-type: none"> • There are zones • Each zone has channels programmed • To switch zones • To switch channels Turn the Channel Knob

Custom Programming

Zone

Channel	Name	Channel	Name

Zone

Channel	Name	Channel	Name

Zone

Channel	Name	Channel	Name

Zone

Channel	Name	Channel	Name

Zone

Channel	Name	Channel	Name

Zone

Channel	Name	Channel	Name

Zone

Channel	Name	Channel	Name

Zone

Channel	Name	Channel	Name

For additional support please contact your local dealer.

Your Local Dealer